


Hermione CDA / Language Pack Changer User's Guide


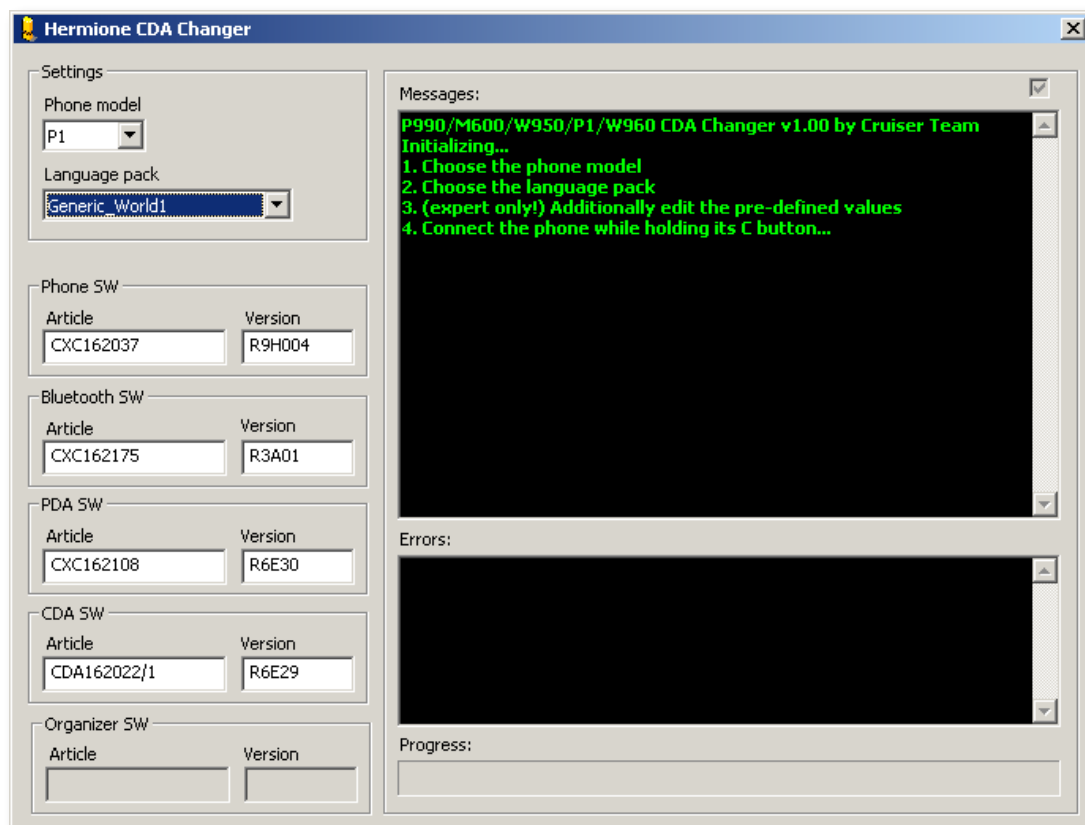


Contents

Introduction	3
Installation	4
Change the Language pack (CDA values)	5
Change CDA values by own	8
Ini files structure	10

Introduction

Hermione CDA / Language Pack Changer is flexible tool which allows you to **change language** on your SonyEricsson PDA phone to any possible and then **upgrade your firmware** to the latest released by vendor.

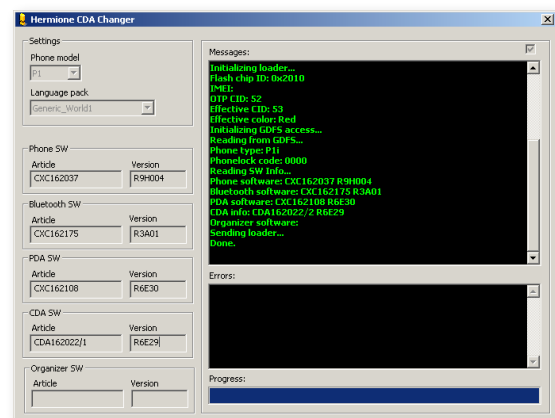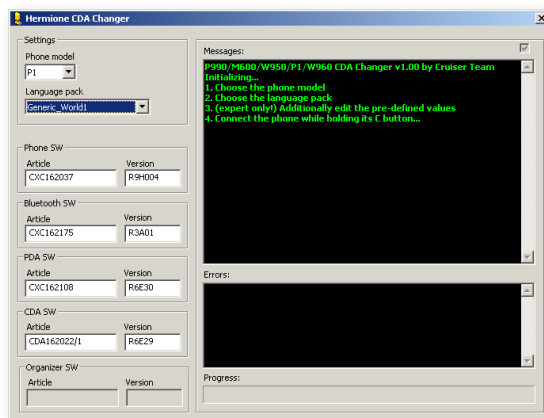

Installation

1. Unpack `HermioneCdaChanger.zip` package into the choosen directory
2. If the smartphone drivers haven't been previously installed,
 - unpack the `drivers_pkg.rar` from the `Drivers` folder
 - install the drivers using `setup.exe`.

Note: The smartcard drivers are provided in this package, too.

3. Download original SonyEricsson update service program `Update_Service_Setup` (Program is the same for all 5 phones)

Examples:

P1i: <http://www.sonyericsson.com/cws/support/products/updateservice/p1i>


P990i: <http://www.sonyericsson.com/cws/support/products/updateservice/p990i>

4. Install original SonyEricsson update service program `Update Service Setup`
5. Cruiser+ Dongle has to be plugged in computer to run the program.
Card ID must end with "-07".

Change the Language pack (CDA values)


(Recommended)

1. Make sure Cruiser+ Dongle is plugged in your computer.
Card ID must end with "-07".
2. Run `HermioneCdaChanger.exe`

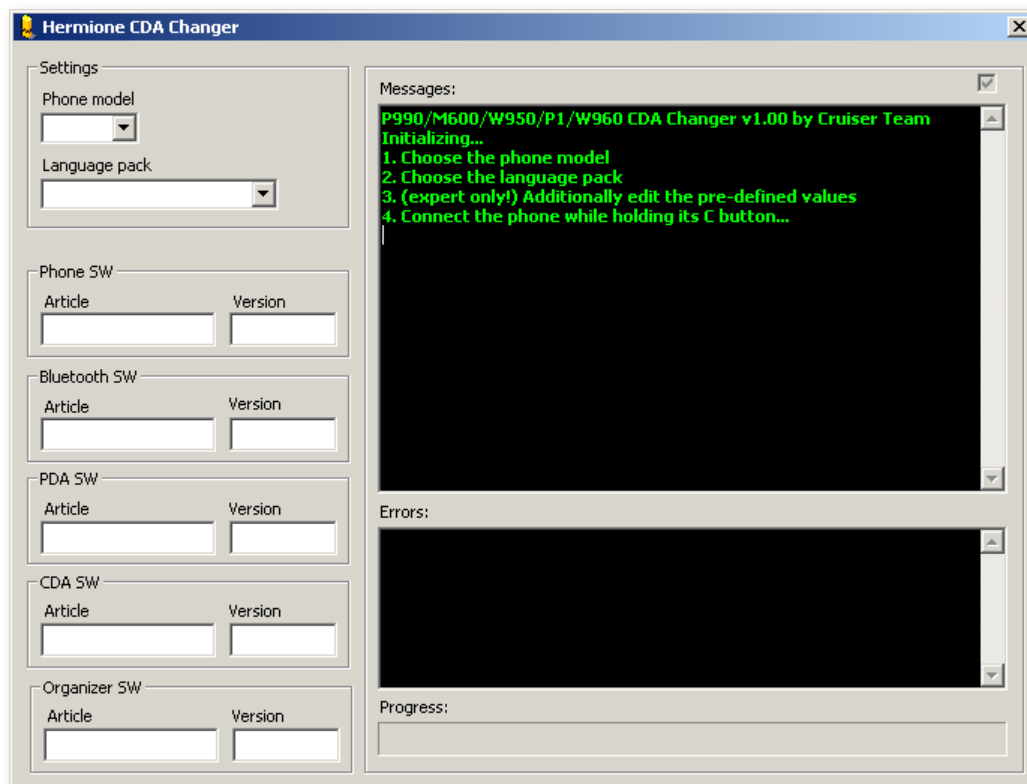


3. Choose type of the phone.

4. Choose language pack

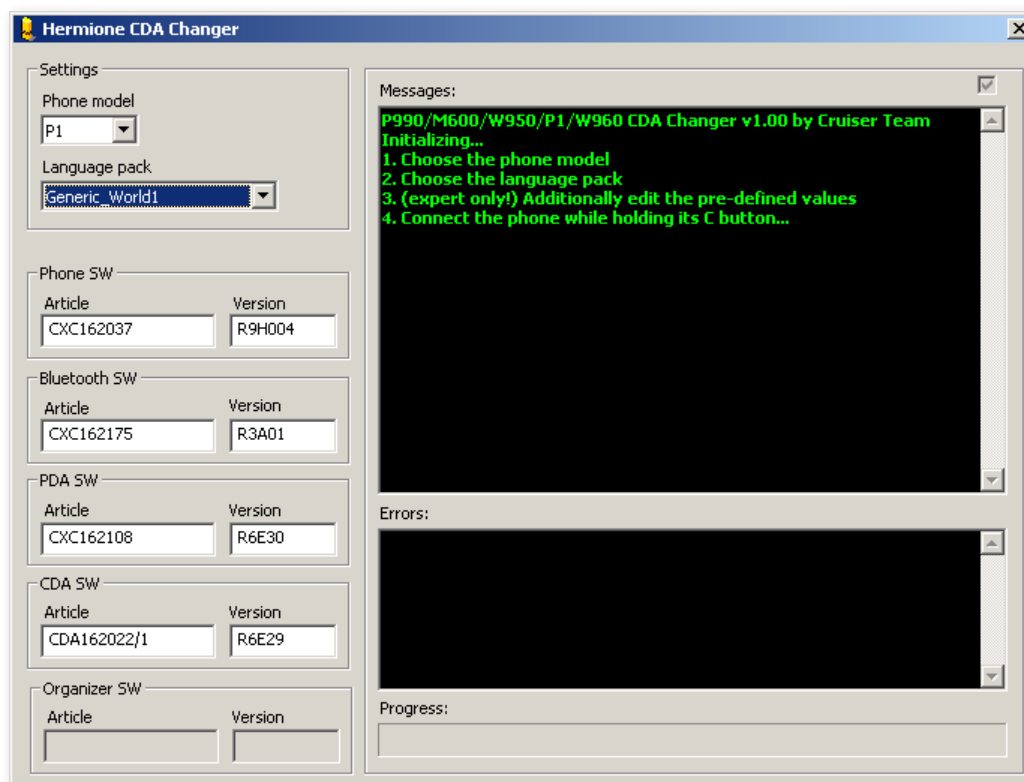

5. (Optional) Change values if you need.

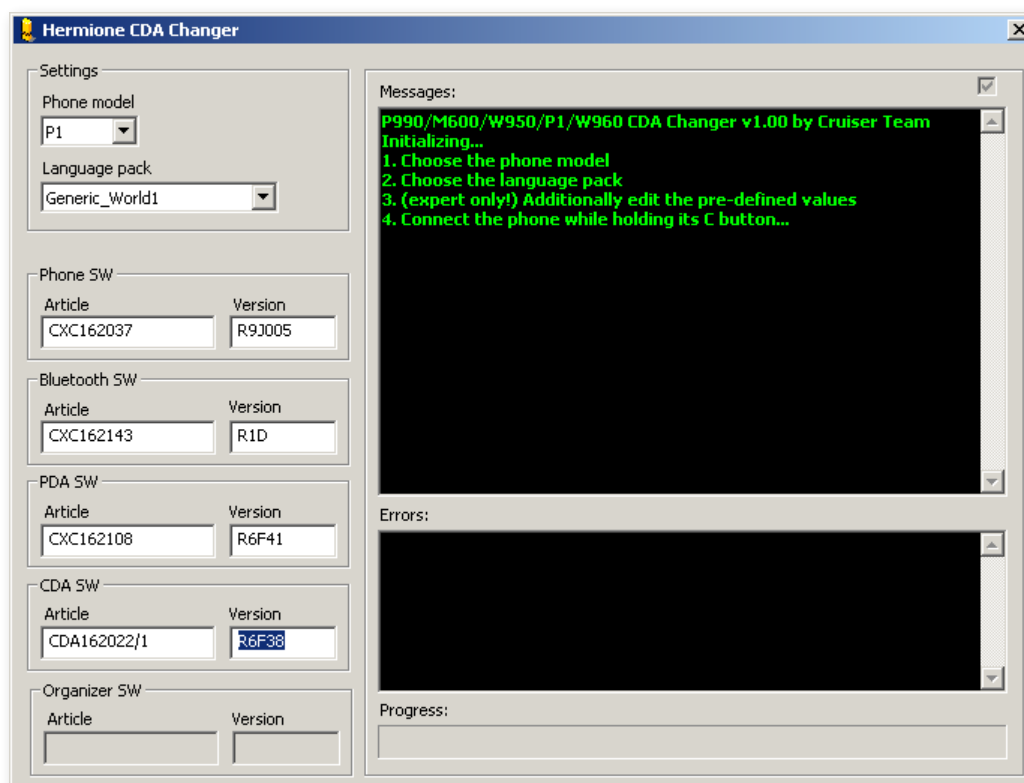


continued ►

6. Connect the phone while holding its "C" button.

Note: If the phone hasn't been previously connected, windows can wrongly inform you that "USB device not recognized". Just wait for few seconds and this should be fixed.

7. Wait while the program changed the language pack.

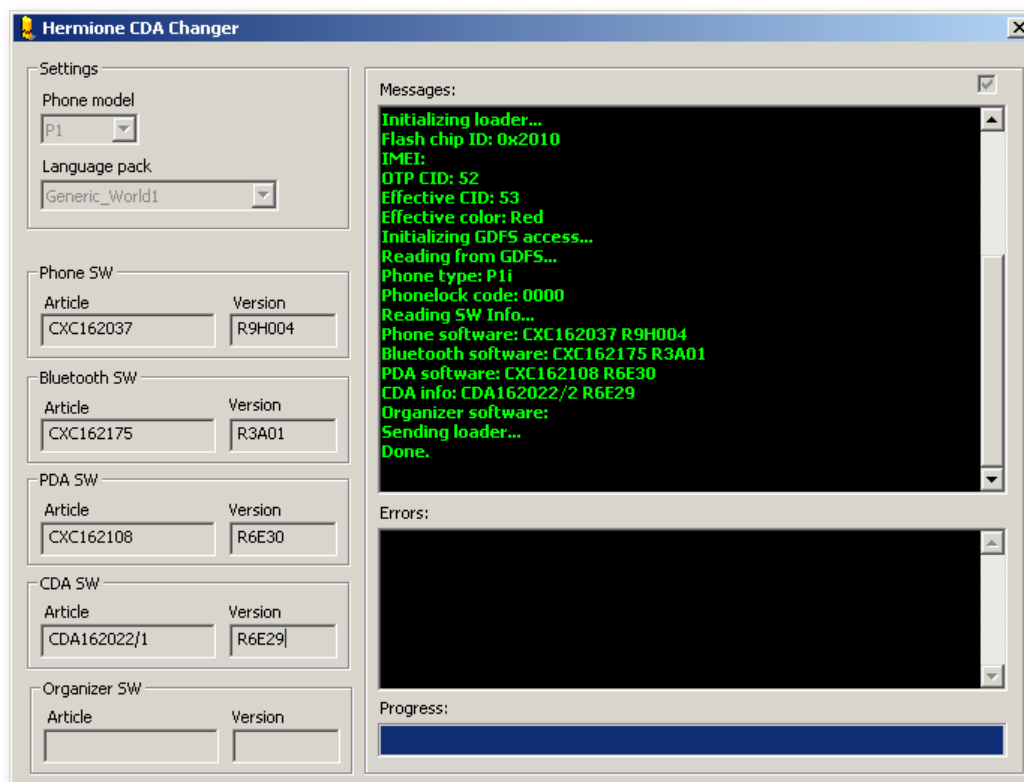

8. Disconnect phone and reconnect its battery!


9. Run original SonyEricsson Update Service Program

10. Update the new language pack by Update Service program

Change CDA values by own


(Not recommended, only for experts)

1. Make sure Cruiser+ Dongle is plugged in your computer.
Card ID must end with "-07".
2. Run `HermioneCdaChanger.exe`

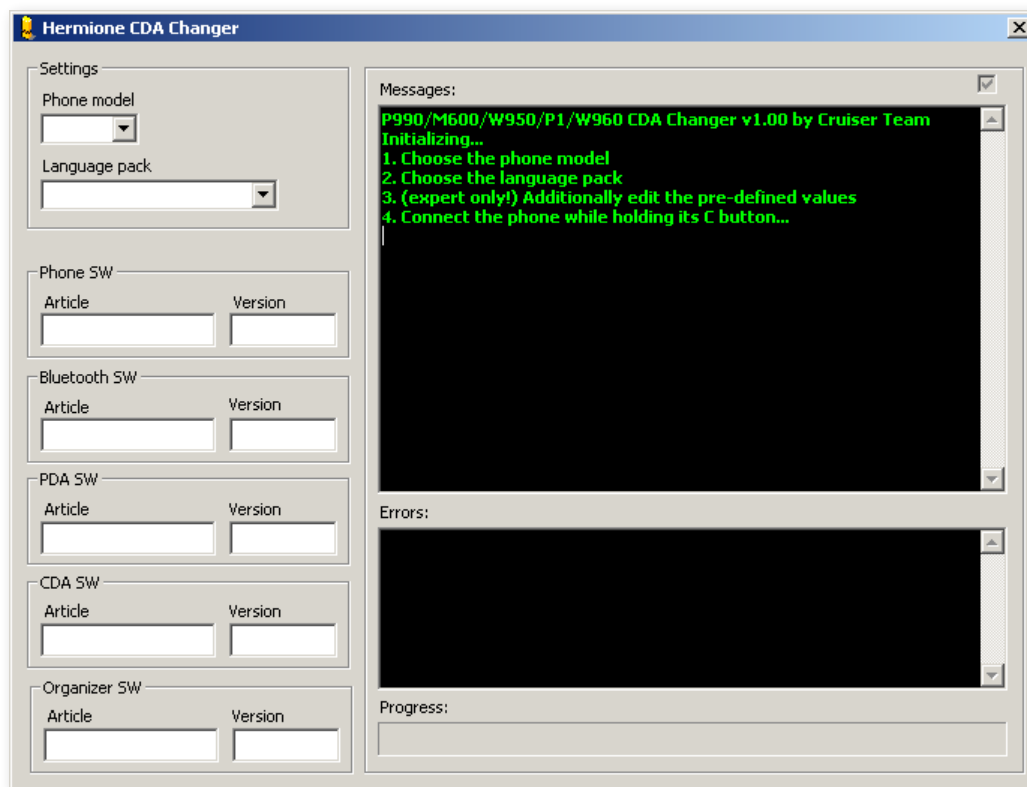

3. Choose type of the phone.

- 4.** Set own values into edit boxes.
If the value in edit box is empty, then the phone value will not be changed.

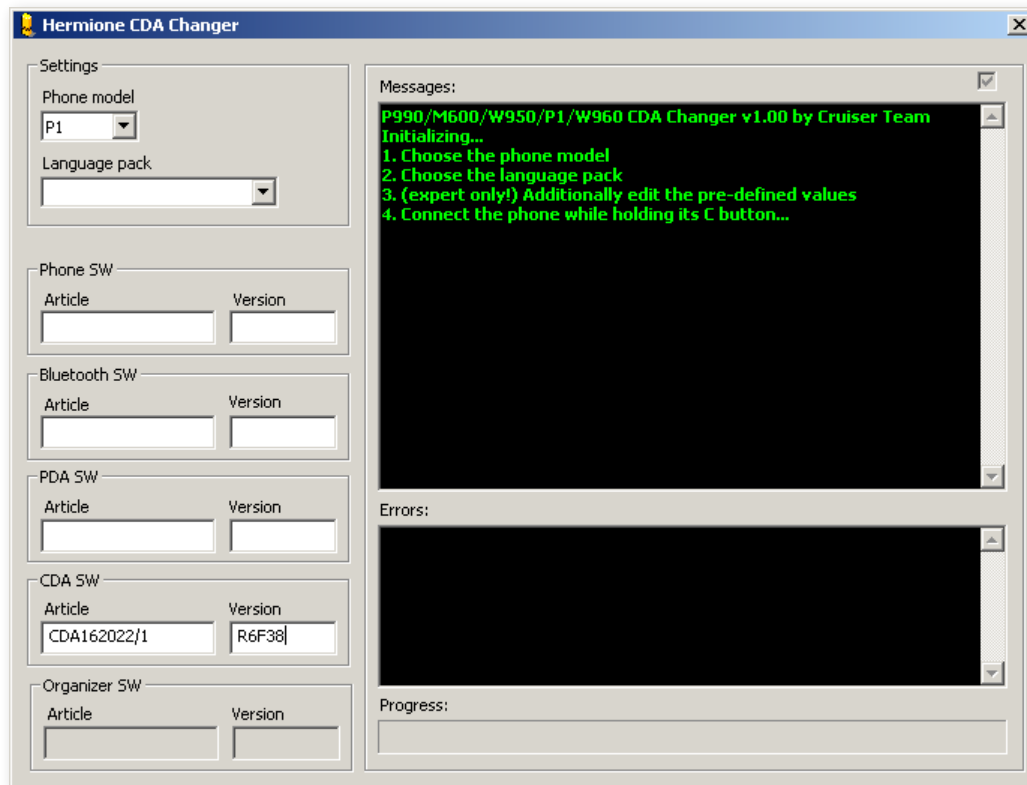

- 5.** Connect the phone while holding its “C” button.

(Optionals)

- 6.** Wait while the program changed the language pack.
- 7.** Disconnect phone and reconnect its battery!
- 8.** Use original SonyEricsson Update Service Program

Ini files structure

Filename: PhoneType.ini

File structure: [Language Pack Name]
 CDAType = value
 CDAType = value
 ...

 [Language Pack Name]
 CDAType = value
 CDAType = value
 ...

 [Language Pack Name]
 ...

Note: Each phone has its own CDATypes.

Example: P990.ini

```
[Generic_World1]
PhoneSwArticle      = CXC162037
PhoneSwVersion      = R9GA001
BluetoothSwArticle  = CXC162087
BluetoothSwVersion  = R6A04
OrganizerSwArticle  = CXC162058
OrganizerSwVersion  = R5A01
PdaSwArticle        = CXC162036
PdaSwVersion        = R6E28
CdaArticle          = CDA162007/1
CdaVersion          = R6E28

[Generic_World2]
PhoneSwArticle      = CXC162037
PhoneSwVersion      = R9GA001
BluetoothSwArticle  = CXC162087
BluetoothSwVersion  = R6A04
OrganizerSwArticle  = CXC162058
OrganizerSwVersion  = R5A01
PdaSwArticle        = CXC162036
PdaSwVersion        = R6E28
CdaArticle          = CDA162007/2
CdaVersion          = R6E28
```